


**ARCTIC CAT<sup>®</sup>**

**2002**

**ZR<sup>®</sup> 120**

Model No. S2002ZRAAAUSG

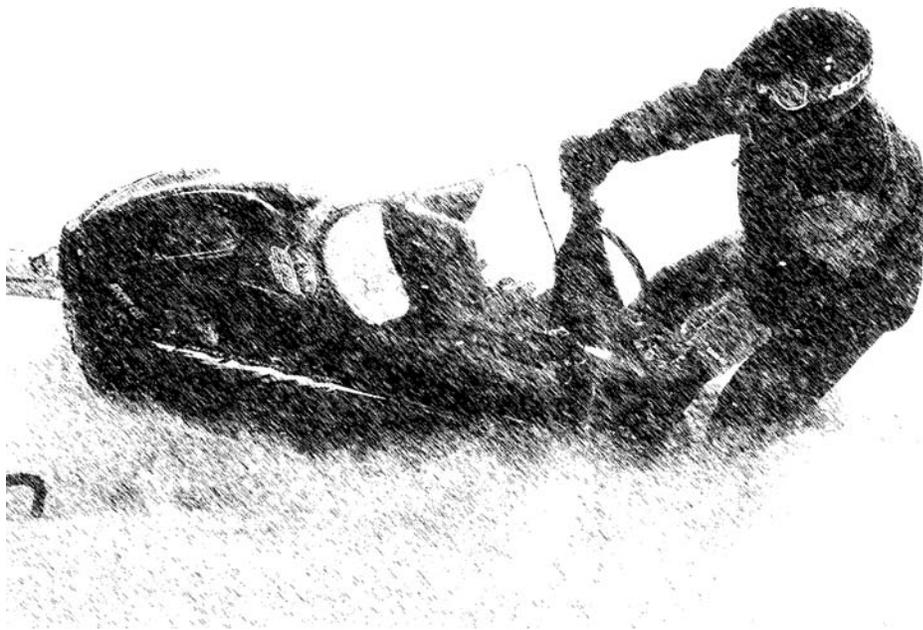

***ILLUSTRATED***  
**PARTS MANUAL**


# TABLE OF CONTENTS

## 2002 ZR 120

(Model No. S2002ZRAAAUSG)

SKI AND SPINDLE ASSEMBLY .....	1
A-ARM ASSEMBLY .....	2
FRONT SUSPENSION SHOCK ABSORBER .....	3
STEERING POST AND TIE ROD ASSEMBLY .....	4
DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES .....	5
SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY .....	6
REAR SUSPENSION ARM ASSEMBLY .....	7
CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY .....	8
HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY .....	9
BELLY PAN AND EXHAUST ASSEMBLIES .....	10
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY .....	11
ENGINE AND RELATED PARTS .....	12
AIR CLEANER ASSEMBLY .....	13
CARBURETOR .....	14
CYLINDER AND CRANKCASE .....	15
PISTON AND CRANKSHAFT .....	16
RECOIL STARTER .....	17
THROTTLE CONTROL ASSEMBLY .....	18
MAGNETO .....	19
RELATED ITEMS .....	Back Cover


■ NOTE: The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. Underlined part numbers are new for the 2002 model year.

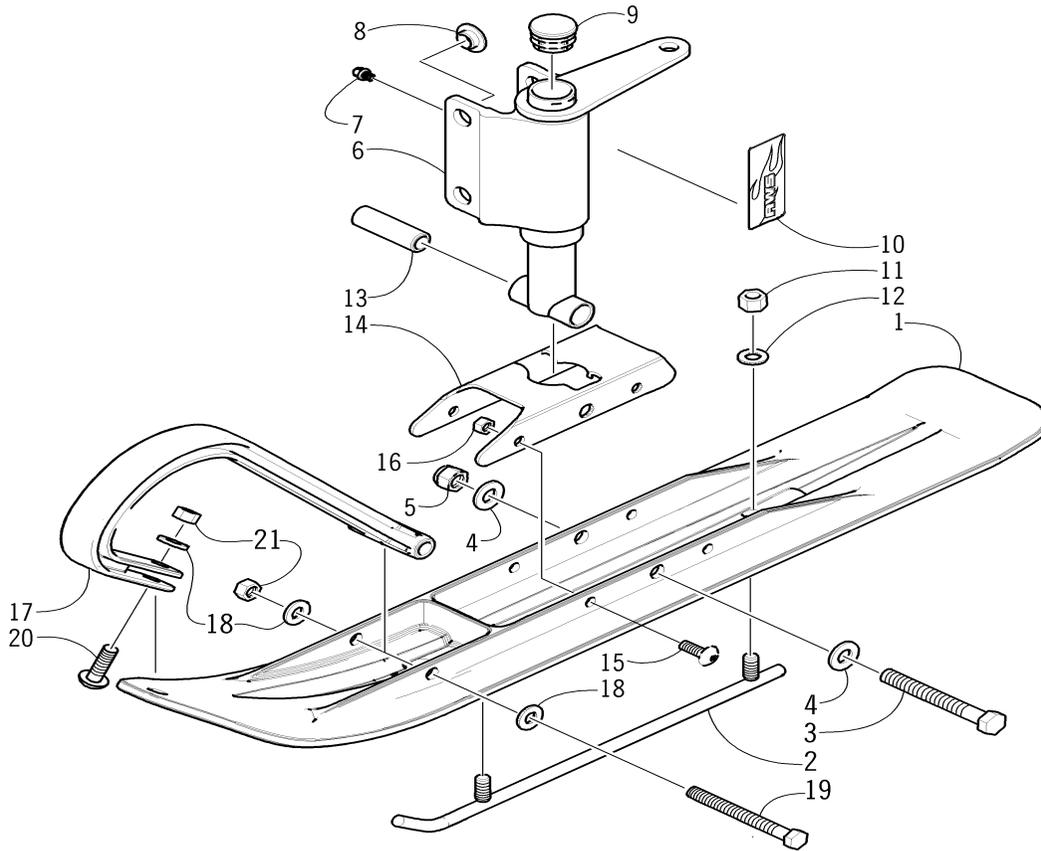

## SKI AND SPINDLE ASSEMBLY

0736-879


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1603-606</u>	2	Ski, Plastic (Green)	11	8040-426	4	Nut, Lock
2	0703-698	2	Wearbar	12	8050-242	4	Washer
3	8002-231	2	Screw, Cap	13	1603-365	2	Axle, Suspension
4	8050-277	4	Washer	14	<u>1603-598</u>	2	Saddle, Ski
5	8040-486	2	Nut, Lock	15	8017-580	8	Screw, Machine
6	0703-834	2	Spindle (inc. 7-8)	16	8041-366	8	Nut, Lock
7	0623-010	2	● Fitting, Grease	17	<u>1603-594</u>	2	Handle, Ski
8	0603-647	8	● Insert, Spindle	18	8050-247	6	Washer
9	0623-831	2	Cap, Spindle	19	8002-141	2	Screw, Cap
10	<u>4611-238</u>	1	Decal, "AWS" - Spindle - Right	20	<u>8017-672</u>	2	Screw, Cap
	<u>4611-239</u>	1	Decal, "AWS" - Spindle - Left	21	8041-426	4	Nut, Lock

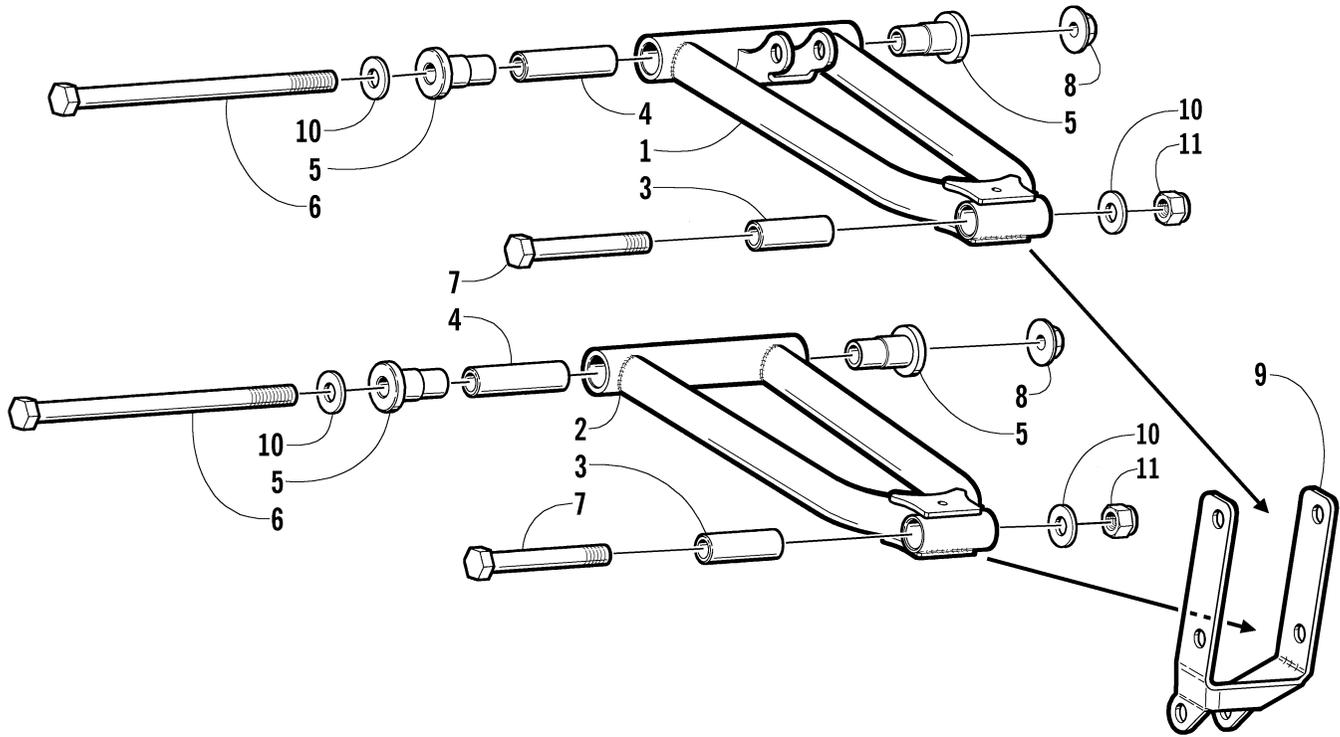

## A-ARM ASSEMBLY

0736-880


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0703-806	2	A-Arm - Upper	7	8002-232	4	Screw, Cap
2	0703-691	2	A-Arm - Lower	8	0623-661	4	Nut, Crown Lock
3	1603-365	4	Axle, Suspension	9	1603-463	2	Bracket, Mounting - Shock
4	1603-394	4	Axle, Suspension	10	8050-277	8	Washer
5	0605-451	8	Axle, Powder Metal	11	8040-486	4	Nut, Lock
6	0623-900	4	Screw, Cap				

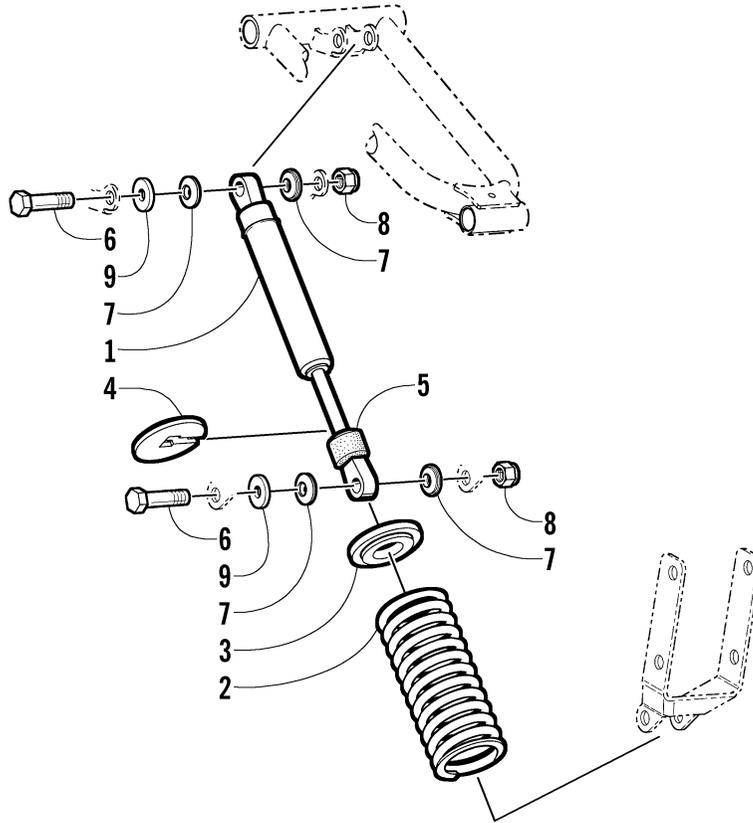

## FRONT SUSPENSION SHOCK ABSORBER

0736-147


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1603-458	2	Shock, Ski	6	0623-897	4	Screw, Cap
2	0703-802	2	Spring, Shock	7	1603-863	8	Bushing, Shock
3	1603-862	2	Retainer, Spring - Lower	8	8040-486	4	Nut, Lock
4	1603-861	2	Retainer, Spring - Upper	9	0623-450	4	Washer
5	1603-872	2	Bumper, Rubber				

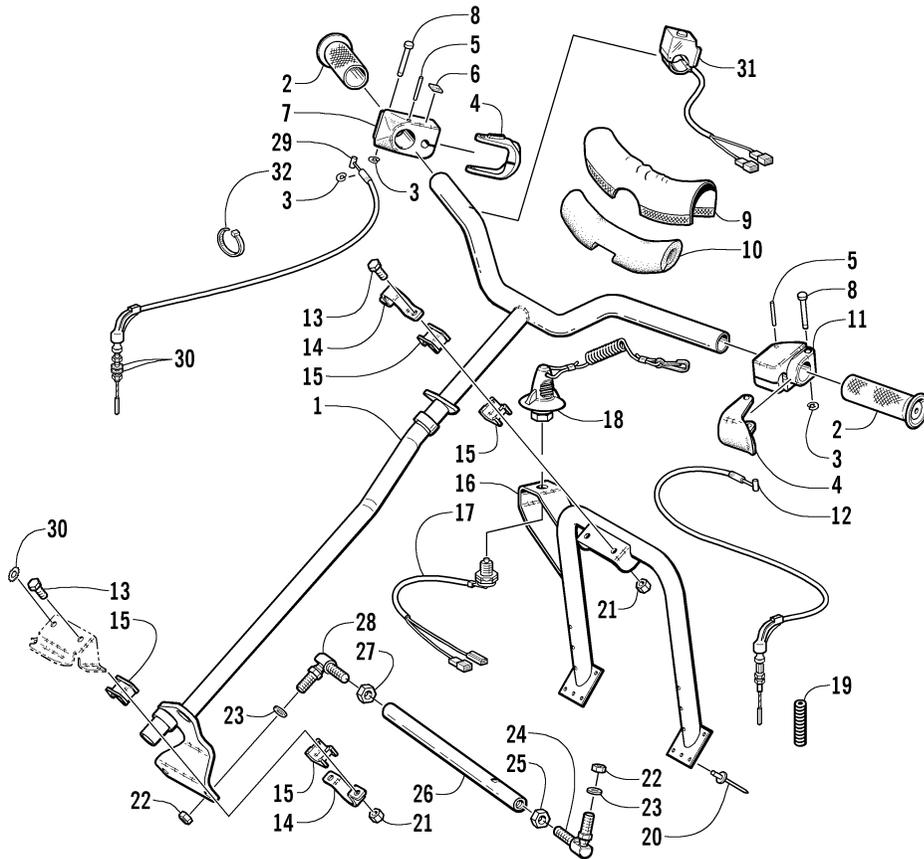

## STEERING POST AND TIE ROD ASSEMBLY

0737-141


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0703-693	1	Post, Steering	17	0630-138	1	Switch, Tether - Assembly (inc. 18)
2	1606-765	2	Grip, Handle	18	0630-139	1	● Cord, Tether Switch
3	0123-231	3	Ring, Retaining	19	1602-100	1	Spring, Return - Brake
4	0109-609	2	Lever, Throttle/Brake	20	8060-484	10	Rivet
5	8070-318	2	Pin, Spring	21	8040-366	4	Nut, Lock
6	0611-022	1	Decal, Engine Stop Switch	22	0623-696	4	Nut, Lock
7	0302-165	1	Control, Throttle	23	0623-044	4	Washer
8	0123-230	2	Pin	24	1603-374	2	Rod End - Right
9	0605-502	1	Cover, Handlebar Pad	25	0123-191	2	Nut, Hex - Right
10	0605-501	1	Pad, Handlebar	26	0605-452	2	Tube, Tie Rod
11	0302-147	1	Housing, Brake	27	0123-917	2	Nut, Hex - Left
12	0687-122	1	Cable, Brake	28	1603-375	2	Rod End - Left
13	8002-040	4	Screw, Cap	29	0687-121	1	Cable, Throttle
14	0605-446	2	Retainer, Bearing	30	8053-212	3	Washer, Lock - External Tooth
15	0605-444	4	Bearing, Steering Post	31	0609-007	1	Switch, Engine Stop
16	1706-050	1	Support, Steering Post	32	0123-788	AR	Cable Tie - 7 in.

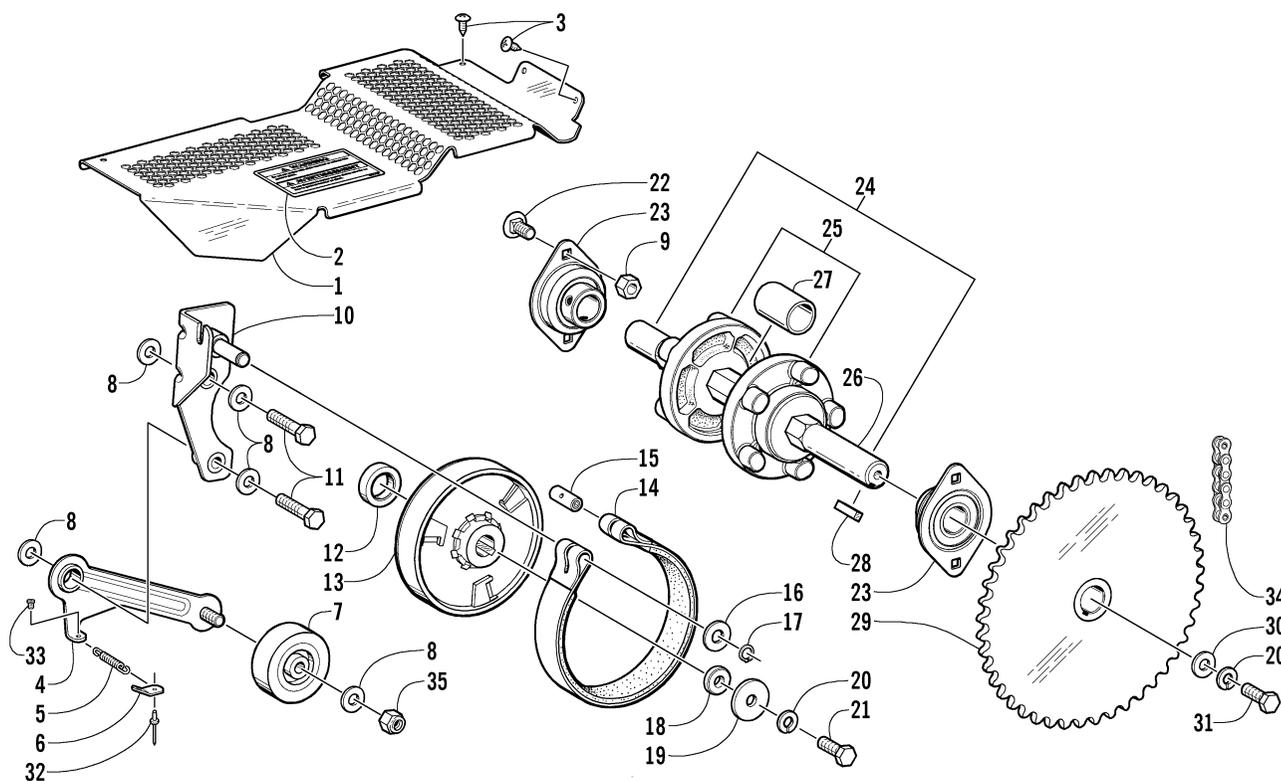

## DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES

0737-161

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1612-180	1	Shield, Clutch/Brake/Muffler	19	0123-260	1	Washer
2	3611-754	1	Decal, Warning - Guard	20	8051-242	2	Washer, Lock
3	0623-797	3	Screw, Self-Tapping	21	8004-132	1	Screw, Cap
4	0702-376	1	Tensioner, Chain	22	8011-130	4	Bolt, Carriage
5	1602-066	1	Spring, Tensioner - Chain	23	1602-023	2	Bearing, Chain Sprocket
6	2606-021	1	Tab, Spring Retainer	24	0728-061	1	Track Drive Assembly (inc. 23 and 25-27)
7	1602-065	1	Roller, Chain Tensioner	25	1602-117	2	● Sprocket, Track Drive
8	8050-247	5	Washer	26	1602-017	1	● Shaft, Track Drive Sprocket
9	8040-426	4	Nut, Lock	27	1602-148	1	● Spacer
10	0702-360	1	Bracket, Brake	28	0623-823	1	Key
11	8004-135	2	Screw, Cap	29	1602-018	1	Sprocket, Chain
12	1602-026	1	Spacer, Clutch - Inner	30	0123-019	1	Washer
13	1602-020	1	Clutch, Centrifugal	31	8002-131	1	Screw, Cap
14	1602-021	1	Band, Brake	32	8060-484	1	Rivet
15	1602-049	1	Pin, Retainer - Brake Cable	33	0623-868	1	Bushing, Snap
16	8050-277	1	Washer	34	1602-019	1	Chain, 76P
17	0623-821	1	Ring, Snap	35	8041-426	1	Nut, Lock
18	1602-027	1	Spacer, Clutch - Outer				

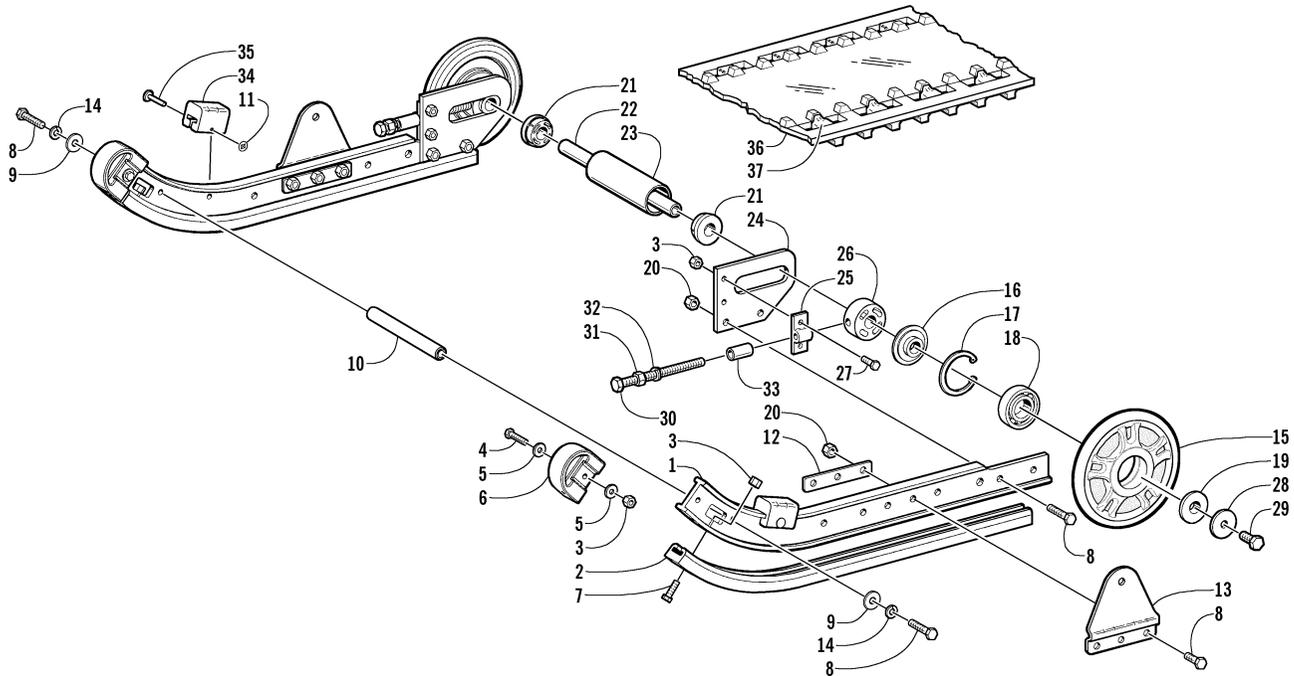


# SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY

(Complete Skid Frame Assembly p/n 7996-348)

0736-882


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0704-605	2	Rail, Formed (Green)	20	8040-426	10	Nut, Lock
2	1604-568	2	Wearstrip, Slide Rail - Black	21	0604-968	2	Bushing, Spacer - Idler Wheel - Rear
3	8040-366	8	Nut, Lock	22	1604-562	1	Axle, Idler Wheel - Rear
4	8002-044	2	Screw, Cap	23	1604-563	1	Spacer, Idler Wheel - Rear
5	8050-217	4	Washer	24	1604-661	2	Housing, Axle - Rear
6	0604-231	2	End Cap, Slide Rail	25	0604-206	2	Adjuster, Track
7	0123-869	2	Screw, Machine	26	0604-165	2	Bushing, Idler Wheel - Adjustment - Rear
8	8002-131	12	Screw, Cap	27	8002-041	4	Screw, Cap
9	8050-247	2	Washer	28	0123-570	2	Washer
10	1604-566	1	Axle, Cross-Brace	29	8002-222	2	Screw, Cap
11	0423-090	2	Nut, Push	30	0124-310	2	Screw, Cap
12	1604-727	2	Plate, Backing	31	8042-486	2	Nut
13	1604-716	2	Bracket, Support - Arm	32	8051-277	2	Washer, Lock
14	8051-247	2	Washer, Lock	33	0604-298	2	Spacer, Track Adjuster
15	1604-691	2	Wheel, Idler - Rear (inc. 16-19)	34	0104-631	2	Pad, Shock
16	1604-772	2	● Insert, Idler Wheel - Inner	35	0123-767	2	Rivet, Solid
17	0123-798	2	● Ring, Retaining	36	1602-015	1	Track Assembly (inc. 37)
18	0107-598	2	● Bearing	37	1602-079	32	● Clip, Guide
19	1604-773	2	● Insert, Idler Wheel - Outer				

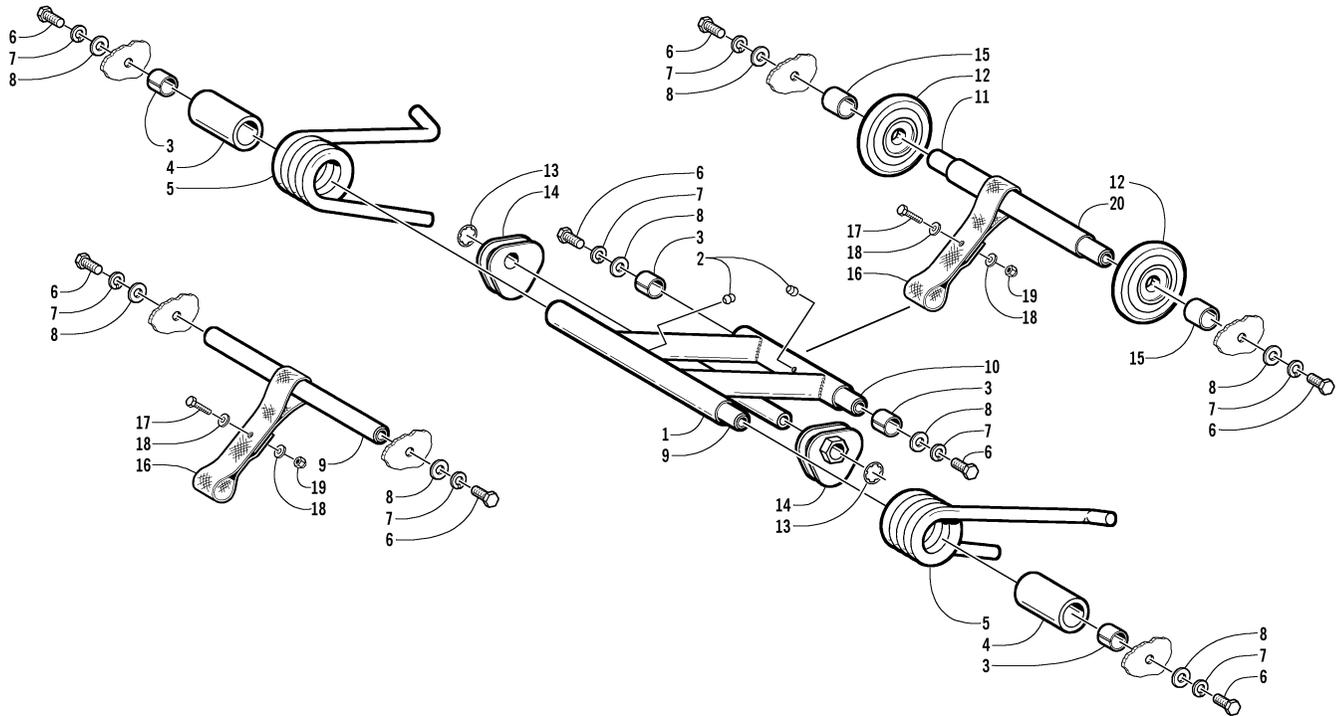

## REAR SUSPENSION ARM ASSEMBLY

0736-150


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0704-734	1	Arm, Rear Suspension (inc. 2-3)	11	1604-673	1	Axle
2	0623-922	2	● Fitting, Grease	12	0300-180	2	Wheel, Idler
3	0603-083	4	● Bearing	13	0623-138	2	Ring, Retaining
4	1604-715	2	Sleeve, Spring	14	1604-204	1	Block, Spring Adjuster - Right
5	1604-706	1	Spring, Rear Suspension - Right	15	1604-205	1	Block, Spring Adjuster - Left
	1604-707	1	Spring, Rear Suspension - Left	16	1604-565	2	Spacer
6	8002-131	8	Screw, Cap	17	1604-708	2	Strap, Limiter
7	8051-247	8	Washer, Lock	18	8002-042	2	Screw, Cap
8	8050-247	8	Washer	19	8050-222	4	Washer
9	1604-555	2	Axle	19	8040-366	2	Nut, Lock
10	1604-710	1	Axle, Rear Suspension Arm - Lower	20	1604-564	1	Spacer

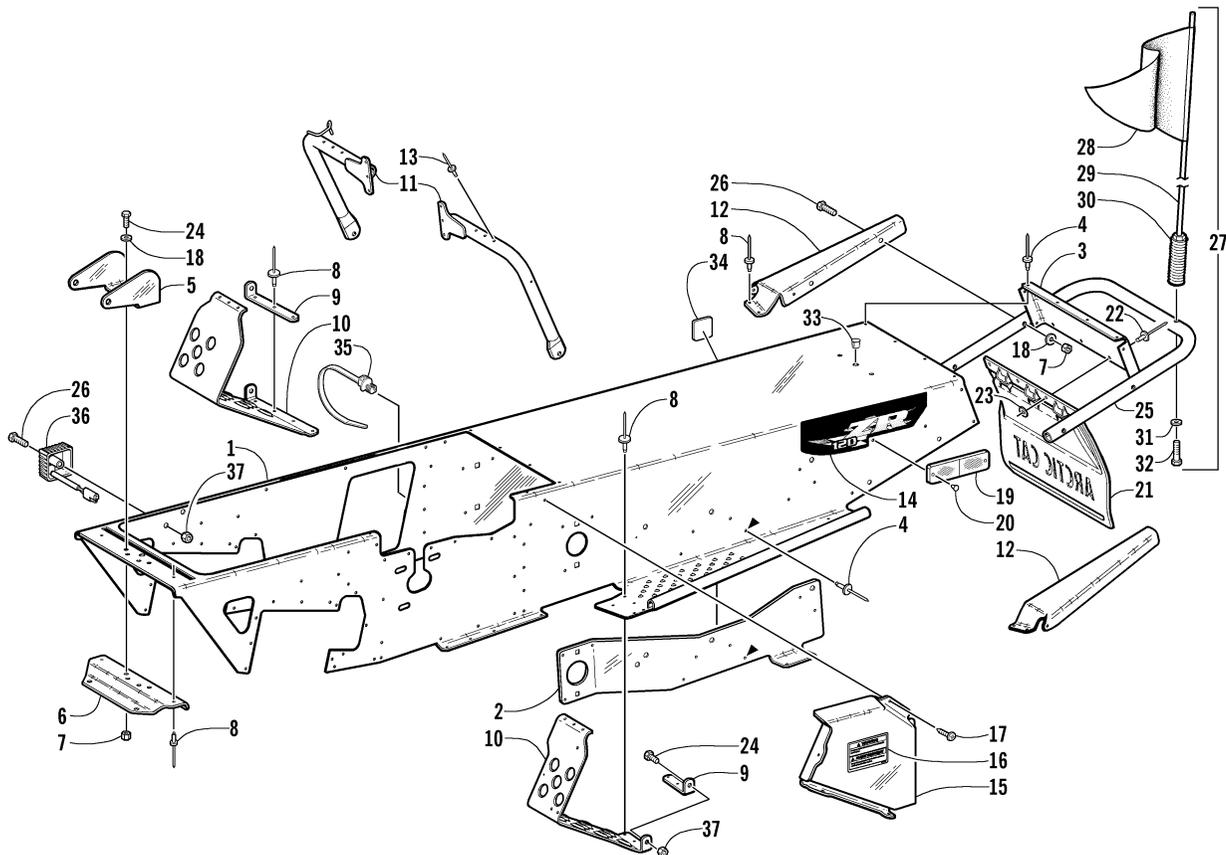

## CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY

0736-883


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0718-996	1	Tunnel Assembly (inc. 2-4)	17	0623-301	4	Screw, Self-Tapping
2	2606-218	1	● Plate, Reinforcement - Tunnel - Right	18	8050-217	8	Washer
	2606-219	1	● Plate, Reinforcement - Tunnel - Left	19	0606-029	2	Reflector, Rear - Red
3	1606-740	1	● Plate, Cover - Tunnel	20	0623-269	4	Clip, Retaining
4	0123-418	30	● Rivet	21	1606-750	1	Snowflap
5	2606-009	1	Bracket, Mounting - Hood - Lower	22	8060-628	4	Rivet
6	2606-019	1	Plate, Reinforcement	23	0123-802	4	Washer
7	8040-366	10	Nut, Lock	24	8002-040	8	Screw, Cap
8	8060-504	AR	Rivet	25	1706-018	1	Bumper, Rear
9	1606-826	1	Bracket, Support - Footrest - Right	26	8002-044	5	Screw, Cap
	1606-827	1	Bracket, Support - Footrest - Left	27	1706-105	1	Flag, Safety - Assembly (inc. 28-32)
10	1606-784	1	Footrest - Right	28	1706-104	1	● Flag, Safety
	1606-785	1	Footrest - Left	29	1606-954	1	● Pole, Safety Flag
11	1706-283	1	Support, Footrest - Right	30	2606-010	1	● Mounting, Safety Flag - Assembly
	1706-041	1	Support, Footrest - Left	31	8050-247	1	● Washer
12	1606-816	1	End Cap, Rear Bumper - Right	32	8002-134	1	● Screw, Cap
	1606-817	1	End Cap, Rear Bumper - Left	33	0623-562	1	Plug, Hole
13	8060-506	6	Rivet	34	0411-053	1	Decal, "CE"
14	4611-208	1	Decal, Tunnel - Right	35	0623-677	1	Cable Tie, Push Mount
	4611-209	1	Decal, Tunnel - Left	36	0630-001	1	Regulator, Voltage
15	1606-786	1	Cover, Sprocket - Driven	37	8041-366	3	Nut, Lock
16	3611-754	1	Decal, Warning - Cover				

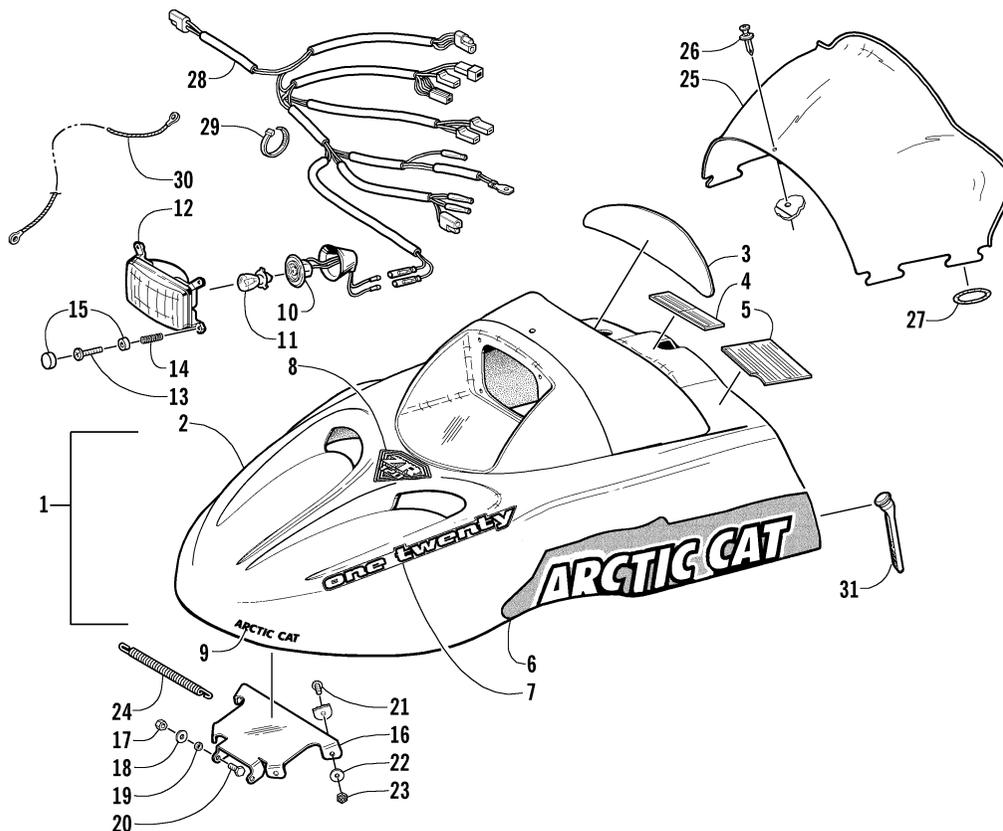

## HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY

0736-885


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1718-052</u>	1	Hood w/Decals (inc. 2-9)	16	2606-008	1	Bracket, Mounting - Hood - Upper
2	<u>1718-193</u>	1	● Hood w/o Decals (inc. 3-5)	17	8040-366	2	Nut, Lock
3	3611-675	1	●● Decal, Instrument Panel	18	8050-217	2	Washer
4	3611-755	1	●● Decal, Caution - Throttle	19	0107-234	2	Spacer
5	3611-678	1	●● Decal, Caution - Hood	20	8002-040	2	Screw, Cap
6	<u>4611-210</u>	1	● Decal, Hood - Right	21	0623-420	4	Screw, Hex Washer Head
	<u>4611-211</u>	1	● Decal, Hood - Left	22	0623-594	4	Washer
7	<u>4611-212</u>	2	● Decal, "One Twenty" - Hood	23	0623-392	4	Nut, Lock
8	<u>4611-213</u>	1	● Decal, Crest	24	0123-510	1	Spring, Extension
9	3611-883	1	● Decal, "Arctic Cat" - Hood	25	<u>1639-797</u>	1	Windshield
10	0609-006	1	Socket w/Rubber Cap	26	0623-243	1	Clip, Retaining
11	0609-004	1	Bulb, Headlight	27	0616-032	4	O-Ring, Windshield
12	0609-005	1	Lens/Reflector, Headlight	28	0686-684	1	Harness, Wiring - Main
13	0123-616	4	Screw, Adjustment	29	0123-788	AR	Cable Tie - 7 in.
14	0123-614	4	Spring, Adjustment Screw	30	0606-121	1	Cable, Hood
15	0124-054	4	Snap Cap w/Washer	31	1606-930	2	Strap, Hold-Down

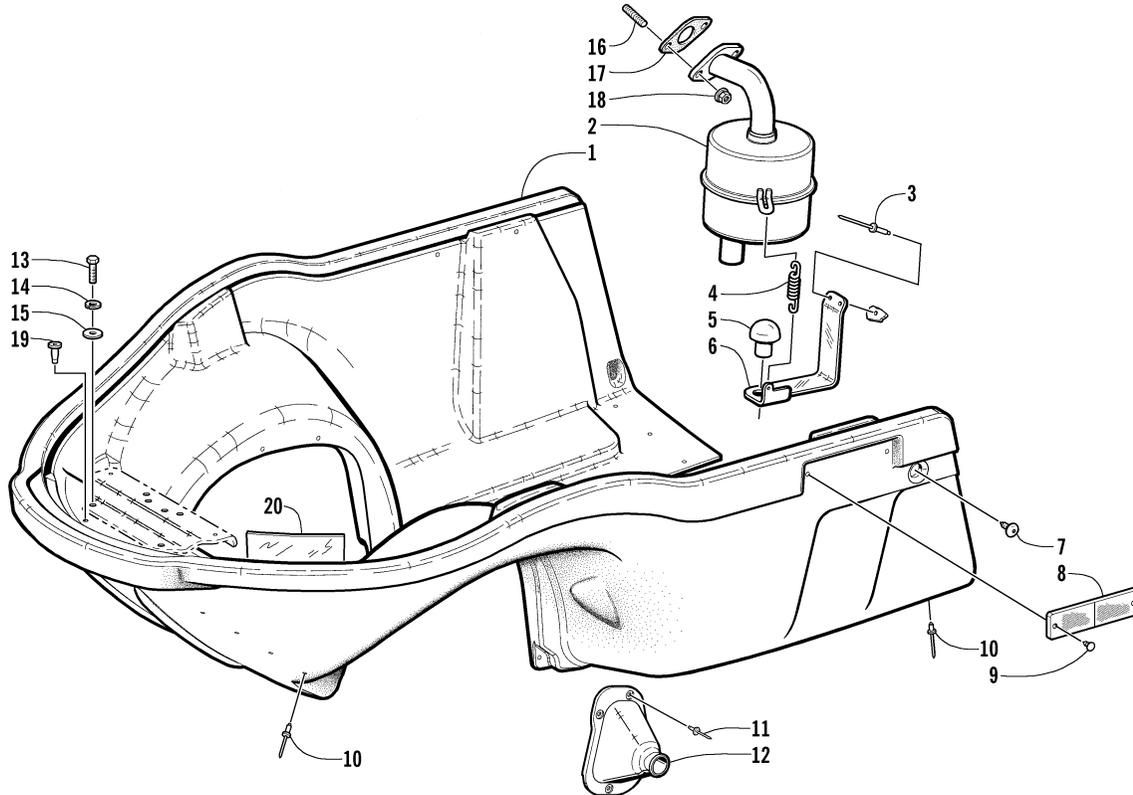

## BELLY PAN AND EXHAUST ASSEMBLIES

0736-153

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1606-748	1	Belly Pan	12	0605-464	1	Boot, Tie Rod - Right
2	1612-155	1	Muffler		0605-465	1	Boot, Tie Rod - Left
3	8060-484	2	Rivet	13	8002-041	2	Screw, Cap
4	0123-321	1	Spring, Extension	14	8051-217	2	Washer, Lock
5	0612-111	1	Bumper, Molded - Rubber	15	8050-222	2	Washer
6	1612-146	1	Bracket, Muffler Support	16	0693-317	2	Bolt, Stud
7	0623-309	2	Screw, Self-Tapping	17	0691-852	1	Gasket, Exhaust
8	0606-526	2	Reflector, Front - Amber	18	3004-326	2	Nut
9	0623-269	4	Clip, Retaining	19	0623-857	2	Plug
10	8061-508	22	Rivet	20	0619-206	AR	Tape, Foil
11	8060-508	8	Rivet				

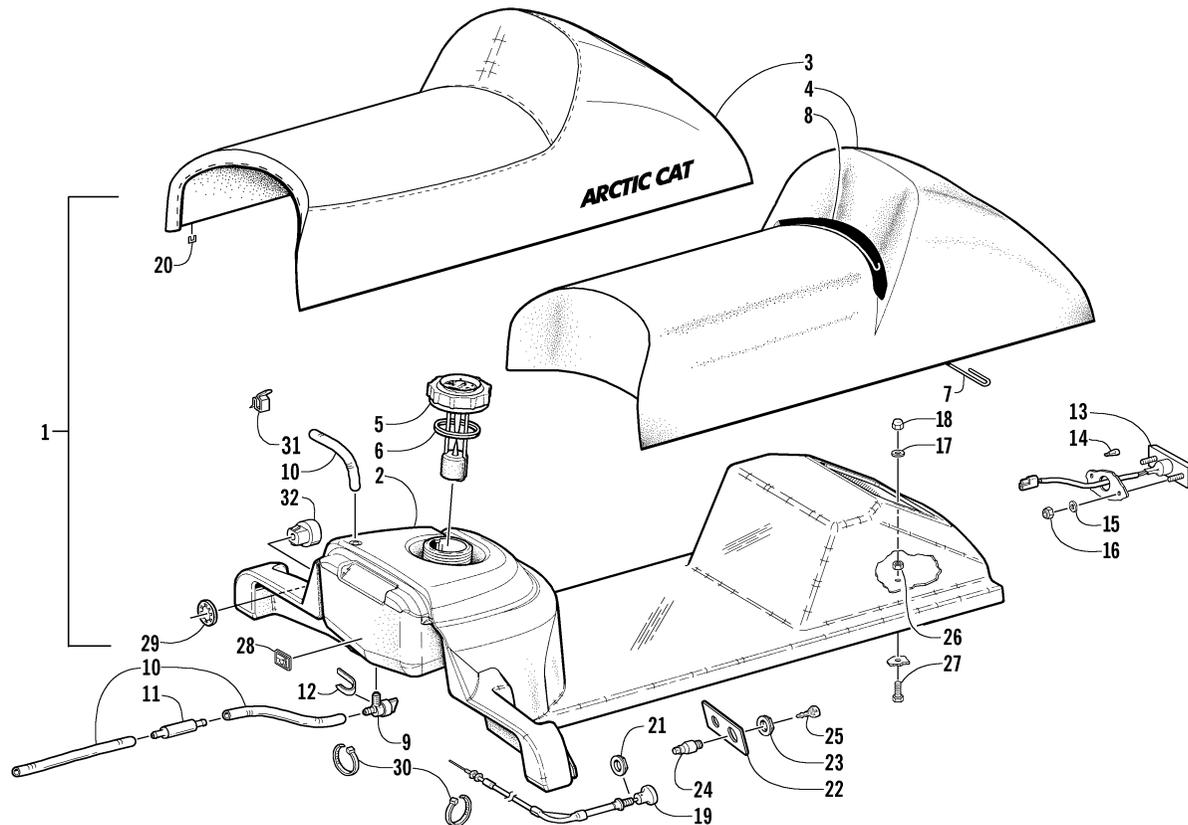


## GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY

(Complete Seat Assembly p/n 1718-180)

0736-891


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1718-180</u>	1	Complete Seat Assembly (inc. 2-8)	17	0623-184	2	Washer
2	2606-125	1	● Tank, Gas/Seat-Base	18	0123-108	2	Nut, Nylon Cap
3	1706-143	1	● Cover, Seat	19	0687-124	1	Cable, Choke
4	1706-017	1	● Foam, Seat	20	0624-528	AR	Staple, Seat Cover
5	1670-084	1	● Cap, Gas Tank (inc. 6)	21	0623-054	1	Nut, Choke Cable
6	0109-733	1	●● Seal, Gas Cap	22	3611-676	1	Decal, Switch/Choke
7	0606-057	1	● Wire, Seat	23	0609-111	1	Nut, Retaining
8	2606-031	1	● Wire, Seat	24	0109-822	1	Switch, Ignition (inc. 25)
9	0676-017	1	Valve, Shut-Off - Gas Tank	25	0116-065	2	● Key
10	0610-017	AR	Hose, Gasline/Vent - 100 ft	26	8041-366	2	Nut, Lock
	0610-008	AR	Hose, Gasline/Vent - 25 ft	27	8002-040	2	Screw, Cap
11	0510-335	1	Filter, Fuel	28	3611-856	1	Decal, Shut-Off Valve
12	0670-289	AR	Tape, Teflon	29	0123-579	1	Nut, Push
13	0609-070	1	Taillight Assembly (inc. 14)	30	0123-788	3	Cable Tie - 7 in.
14	0230-020	1	● Bulb, Taillight	31	0123-394	1	Clip, Cable
15	8050-157	2	Washer	32	0116-469	1	Bushing, Recoil
16	0123-709	2	Nut w/Lock Washer				

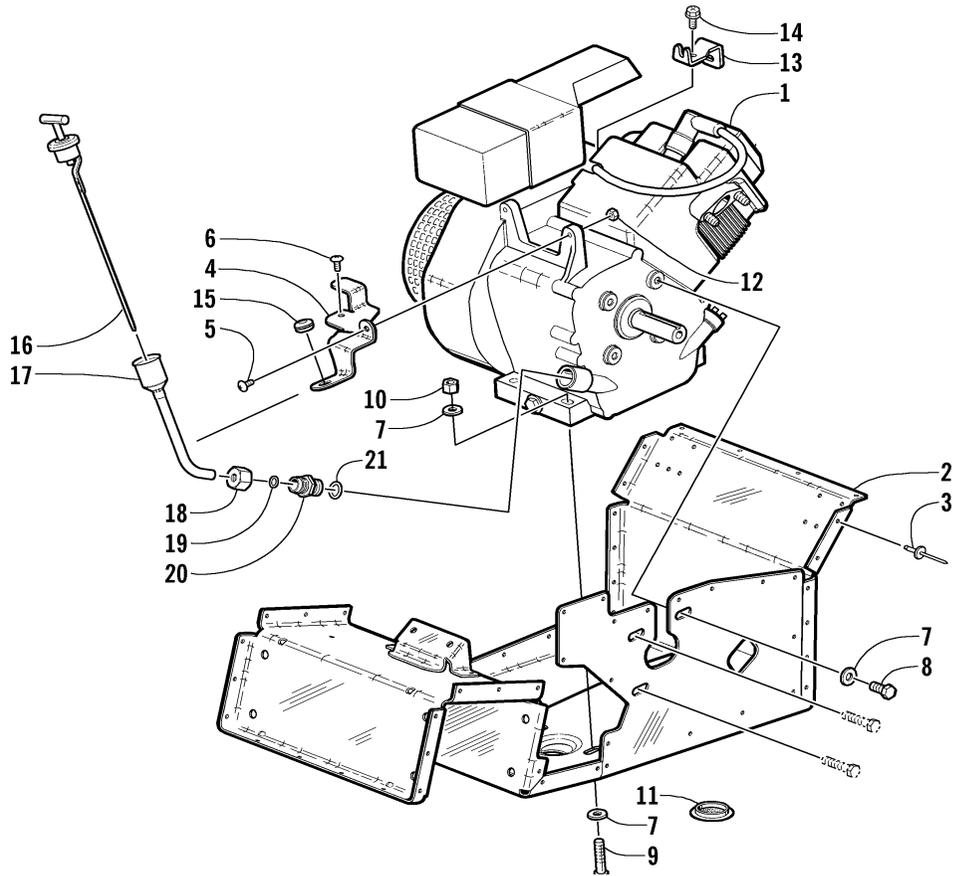

## ENGINE AND RELATED PARTS

0736-155


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0662-326	1	Engine, AA12A1	12	8041-246	1	Nut, Lock
2	1706-235	1	Front End	13	1670-074	1	Bracket, Throttle Cable
3	8060-484	AR	Rivet	14	3004-987	1	Screw, Cap
4	2606-223	1	Cover, Governor	15	1670-235	1	Grommet
5	8007-400	1	Screw, Machine	16	1670-191	1	Stick, Oil Level
6	0623-786	1	Screw, Self-Tapping	17	1670-190	1	Tube, Oil Level Fill
7	8050-247	9	Washer	18	0623-896	1	Nut, Shoulder
8	8004-130	1	Screw, Cap	19	0623-884	1	O-Ring, Oil Level Fill Tube Adapter
9	8002-135	4	Screw, Cap	20	0623-883	1	Adapter, Oil Level Fill Tube
10	8040-426	4	Nut, Lock	21	0623-903	1	O-Ring
11	0623-822	5	Plug				

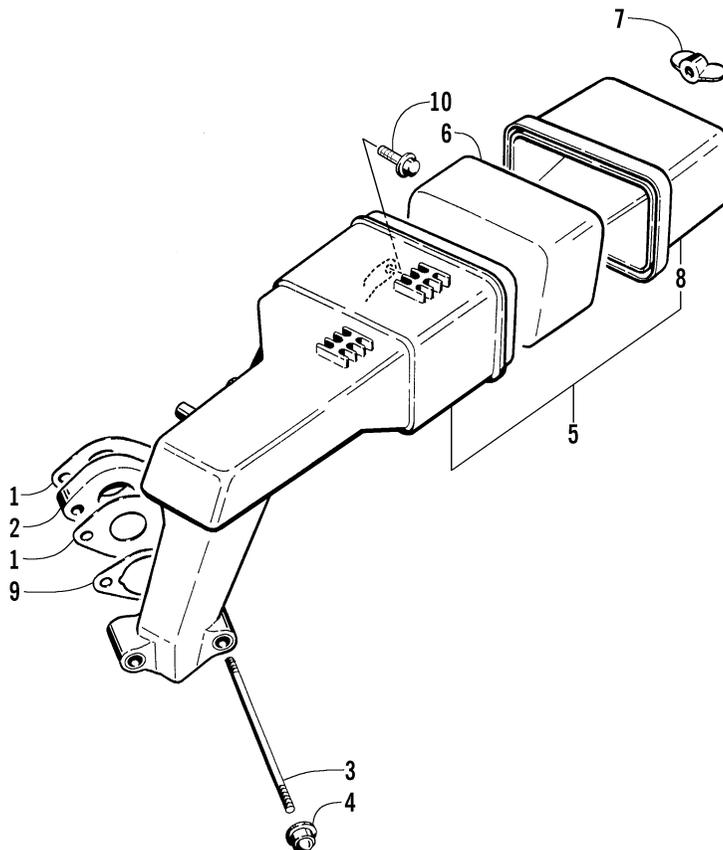

## AIR CLEANER ASSEMBLY

0732-147


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-282	2	Gasket, Carburetor	6	0691-736	1	● Filter, Air Cleaner
2	0691-850	1	Insulator, Carburetor	7	0693-542	1	● Nut, Wing
3	0693-364	2	Bolt, Stud	8	0691-851	1	● Cover, Air Cleaner
4	3004-488	2	Nut	9	0693-287	1	Gasket, Air Cleaner
5	0693-543	1	Cleaner, Air - Assembly (inc. 6-8)	10	0693-307	1	Bolt

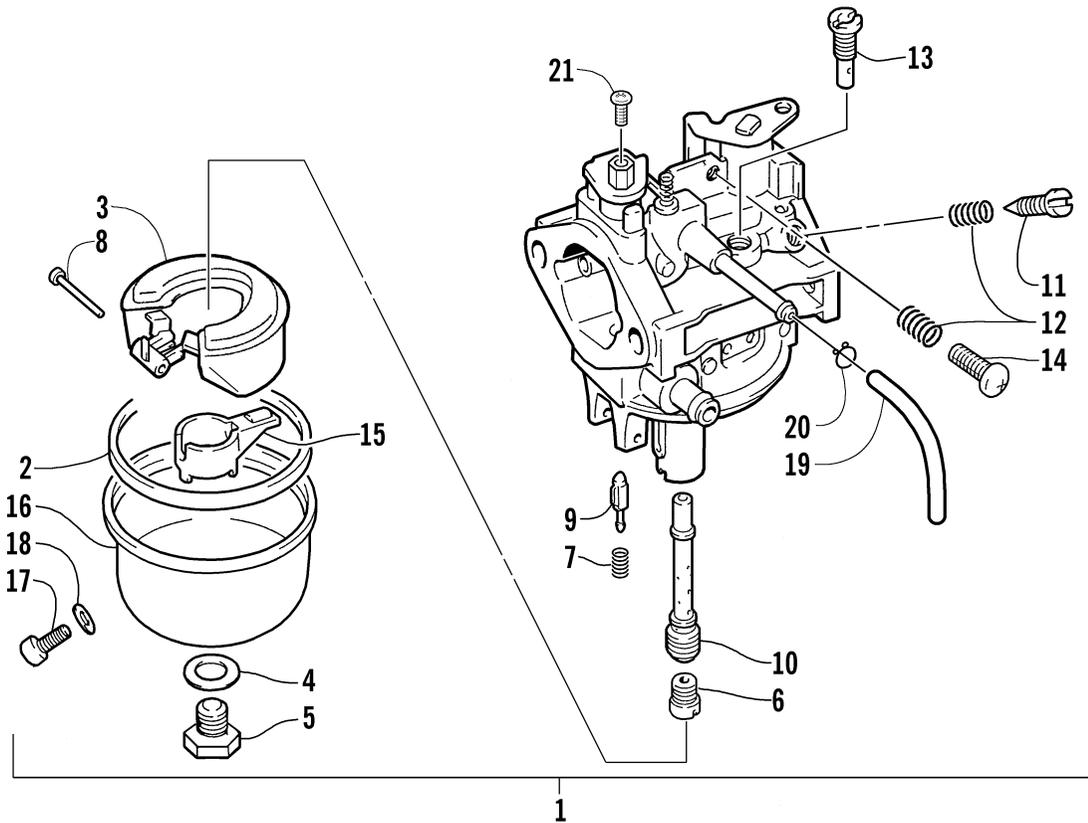

## CARBURETOR

0735-414 \*Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-028	1	Carburetor Assembly (inc. 2-21)	13	0694-033	1	● Pilot Jet (42.5)
2	0691-523	1	● Gasket, Float Chamber		0693-538	1	● Pilot Jet (37.5)*
3	0691-424	1	● Float		6506-261	1	● Pilot Jet (45)*
4	0691-624	1	● Gasket, Drain Plug		6506-262	1	● Pilot Jet (47.5)*
5	0693-697	1	● Plug, Drain		6506-263	1	● Pilot Jet (50)*
6	0694-032	1	● Main Jet (77.5)	14	0693-315	1	● Adjuster Screw, Idle Speed
7	0691-428	1	● Spring, Needle Jet	15	0691-426	1	● Ring
8	0693-536	1	● Pin, Float	16	0693-283	1	● Chamber, Float
9	0693-055	1	● Needle Jet	17	0693-284	1	● Screw, Drain
10	0693-056	1	● Nozzle	18	0693-285	1	● Gasket, Drain Screw
11	0691-102	1	● Adjuster Screw, Pilot Air	19	0694-012	1	● Hose, Gasline
12	0691-272	2	● Spring	20	0694-011	1	● Clamp, Hose
				21	0694-025	1	● Screw

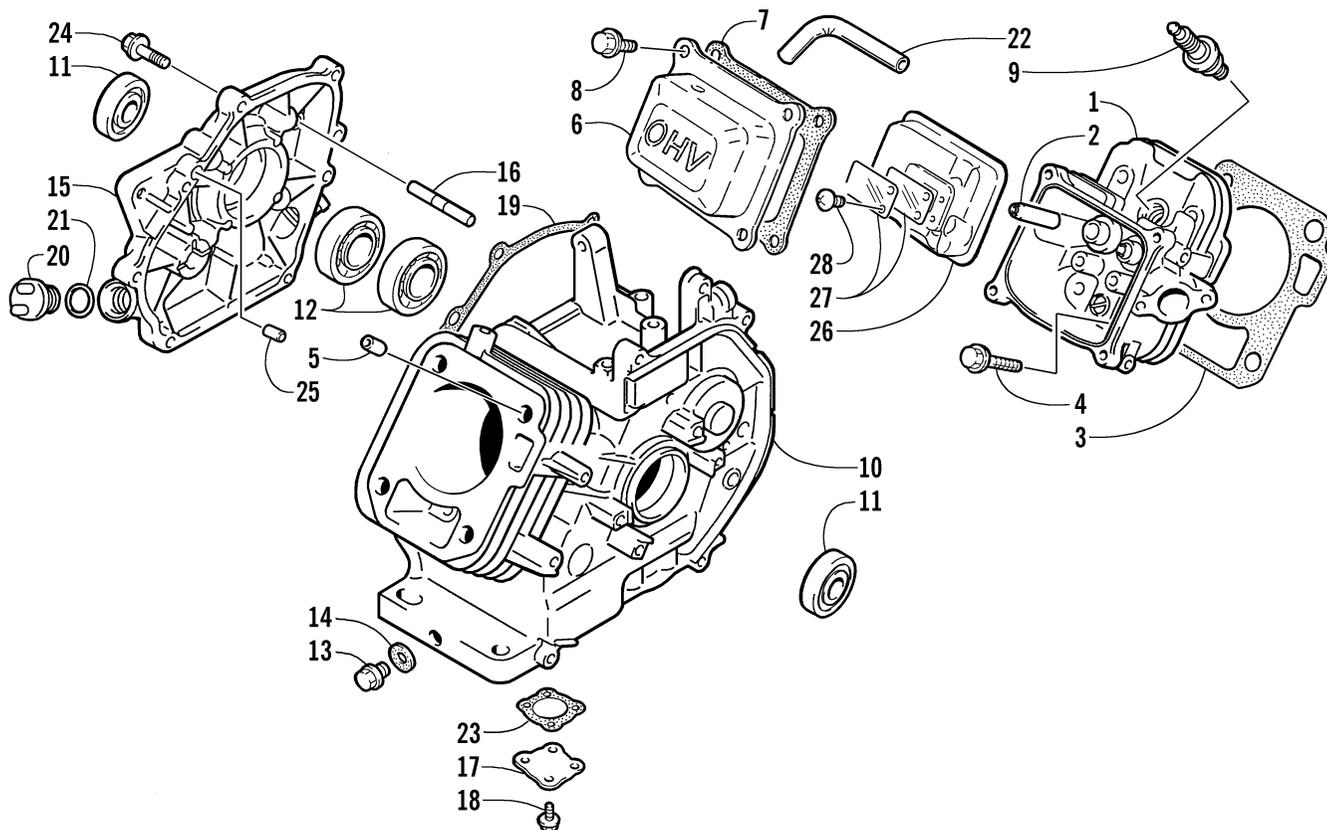

## CYLINDER AND CRANKCASE

0737-143


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-034	1	Head, Cylinder (inc. 2)	15	0694-002	1	Cover, Crankcase - Assembly (inc.16 and one No. 11-12)
2	0691-545	2	● Guide, Valve	16	0691-844	1	● Shaft, Governor Gear
3	0691-386	1	Gasket, Cylinder Head	17	0694-022	1	Cover, Oil Level Sensor
4	0693-303	4	Bolt	18	0693-307	4	Bolt
5	3008-199	2	Pin, Dowel	19	0691-834	1	Gasket, Crankcase
6	0691-830	1	Cover, Cylinder Head	20	0694-004	1	Plug, Engine Oil Drain - Assembly (inc. 21)
7	0691-387	1	Gasket, Cylinder Head Cover	21	0693-298	1	● O-Ring
8	0693-241	4	Bolt	22	0693-362	1	Hose, Air Breather
9	0217-703	1	Plug, Spark (BPR6ES)	23	0691-837	1	Gasket, Engine Oil Level Sensor
10	0694-001	1	Cylinder/Crankcase Assembly (inc. one No. 11-12 and 13-14)	24	0694-035	7	Bolt
11	0691-376	2	● Seal, Oil	25	3005-206	2	Pin, Dowel
12	0691-374	2	● Bearing	26	0691-393	1	Body, Air Breather - Assembly (inc. 27-28)
13	0693-253	2	● Plug	27	0693-226	1	● Valve, Reed - Set
14	3002-276	2	● Gasket	28	0693-305	2	● Screw

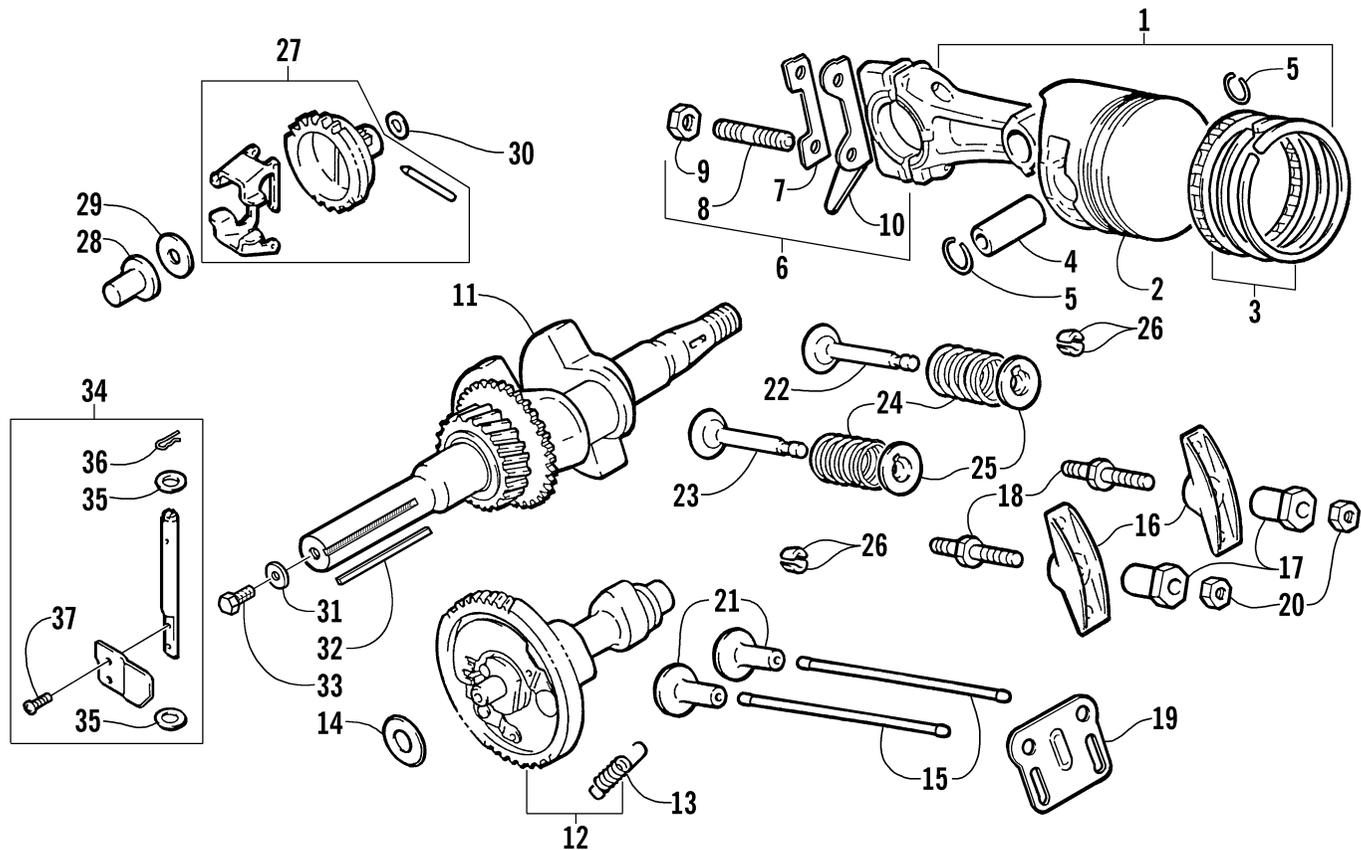

## PISTON AND CRANKSHAFT

0735-429 \*Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-026	1	Piston Assembly (inc. 2, 3, and 5)	17	0691-413	2	Pivot
2	0691-398	1	● Piston	18	0694-037	2	Bolt, Stud - Pivot
	0691-569	1	● Piston, Oversized (0.25 mm)*	19	0691-415	1	Guide, Push Rod
	0691-570	1	● Piston, Oversized (0.50 mm)*	20	0691-016	2	Nut
3	0691-399	1	● Ring, Piston - Set	21	0691-406	2	Tappet
	0691-571	1	● Ring, Piston - Set - Oversized (0.25 mm)*	22	0694-008	1	Valve, Intake
	0691-572	1	● Ring, Piston - Set - Oversized (0.50 mm)*	23	0694-009	1	Valve, Exhaust
4	0691-400	1	Pin, Piston	24	0694-036	2	Spring, Valve
5	0691-378	2	Circlip	25	0693-313	2	Retainer, Valve Spring
6	0691-936	1	Rod, Connecting - Assembly (inc. 7-10)	26	0693-281	4	Cotter, Valve
7	0691-403	1	● Plate, Lock	27	0693-698	1	Gear, Governor - Set
8	0691-366	2	● Bolt, Stud	28	0691-842	1	Slider, Governor
9	3004-851	2	● Nut	29	0691-843	1	Washer
10	0691-402	1	● Plate, Splash	30	3004-652	1	Washer
11	0694-027	1	Crankshaft Assembly	31	0694-024	1	Washer
12	0691-914	1	Camshaft (inc. 13)	32	0694-006	1	Key, Crankshaft
13	0691-380	1	● Spring	33	0694-007	1	Bolt, Crankshaft
14	0691-840	1	Washer	34	0693-258	1	Shaft, Throttle Control - Set (inc. 35-37)
15	0691-407	2	Rod, Push	35	0693-252	2	● Washer
16	0691-412	2	Arm, Rocker	36	0691-848	1	● Clip, Hairpin
				37	3004-563	2	● Screw

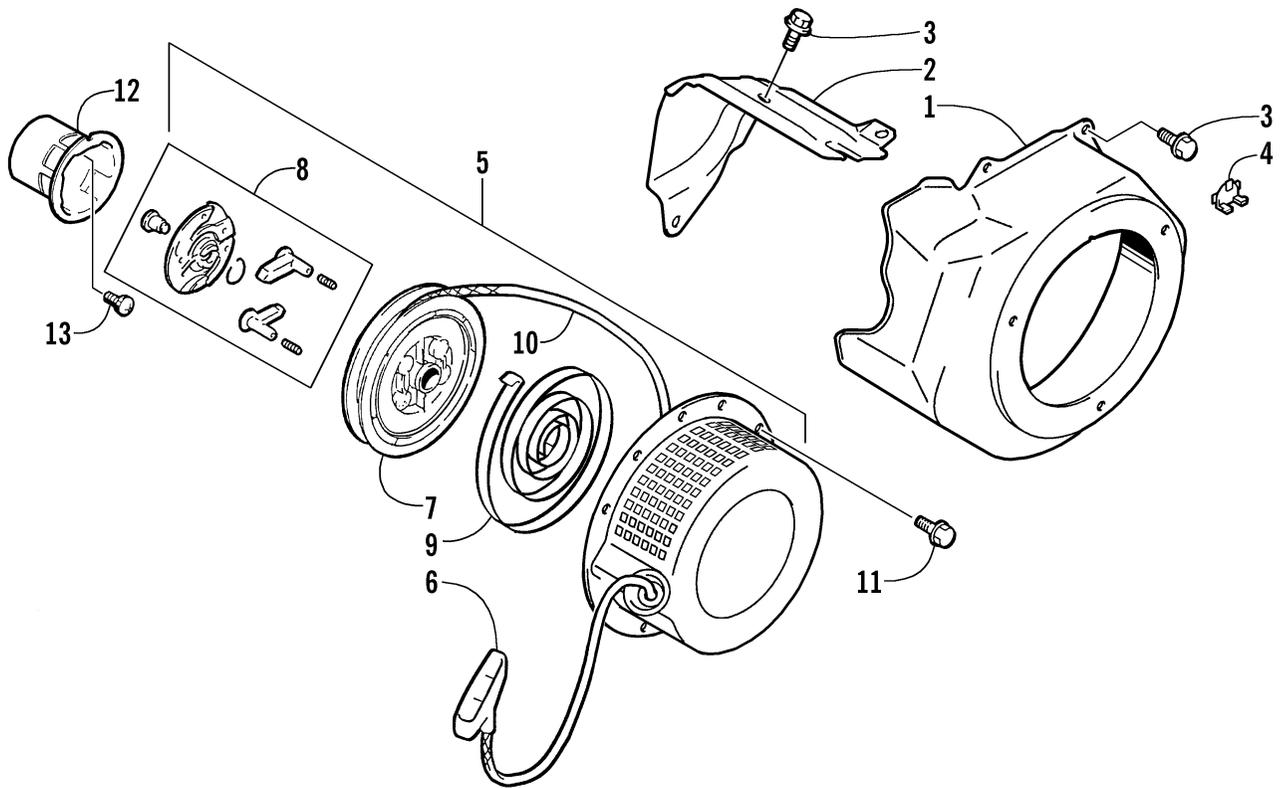

## RECOIL STARTER

0735-430


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-013	1	Cover, Ventilation Cowling	8	0693-256	1	● Ratchet Set
2	0691-853	1	Cowling, Ventilation	9	3005-162	1	● Spring, Spiral
3	0693-241	7	Bolt	10	3004-856	1	Rope
4	0691-122	1	Protector, Lead Wire	11	0693-246	3	Bolt
5	0694-014	1	Starter, Recoil - Assembly (inc. 6-9)	12	0691-863	1	Pulley, Starter
6	0693-257	1	● Grip Assembly	13	3004-423	3	Screw
7	0691-856	1	● Reel				

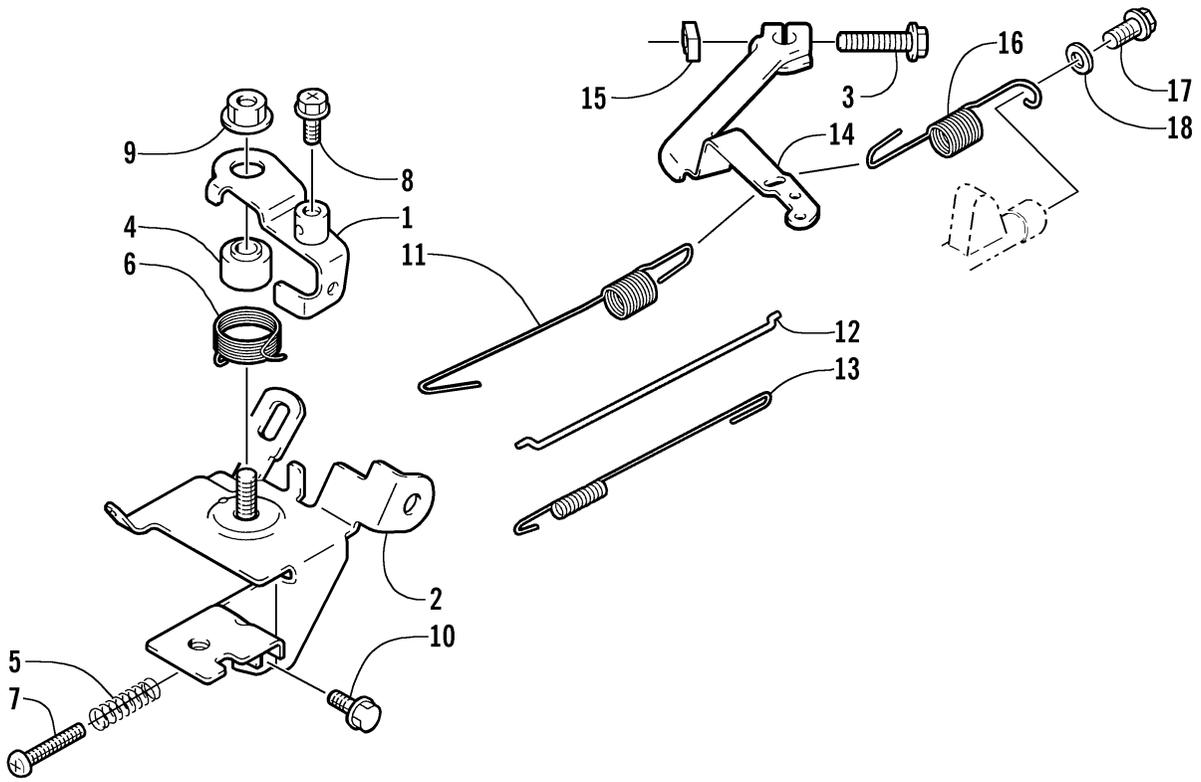

## THROTTLE CONTROL ASSEMBLY

0736-383

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-016	1	Lever, Throttle Cable	10	0693-241	1	Bolt
2	0694-017	1	Bracket, Throttle Control	11	0694-015	1	Spring, Throttle Control
3	0693-416	1	Bolt	12	0694-019	1	Rod, Carburetor
4	3002-459	1	Spacer	13	0691-455	1	Spring, Carburetor Rod
5	0691-901	1	Spring	14	0693-259	1	Lever, Throttle Control (inc. 3 and 15)
6	<u>0694-038</u>	1	Spring	15	0691-017	1	● Nut
7	3004-611	1	Screw	16	0623-965	1	Spring
8	3004-987	1	Bolt	17	0623-966	1	Screw
9	3004-351	1	Nut	18	8050-217	1	Washer

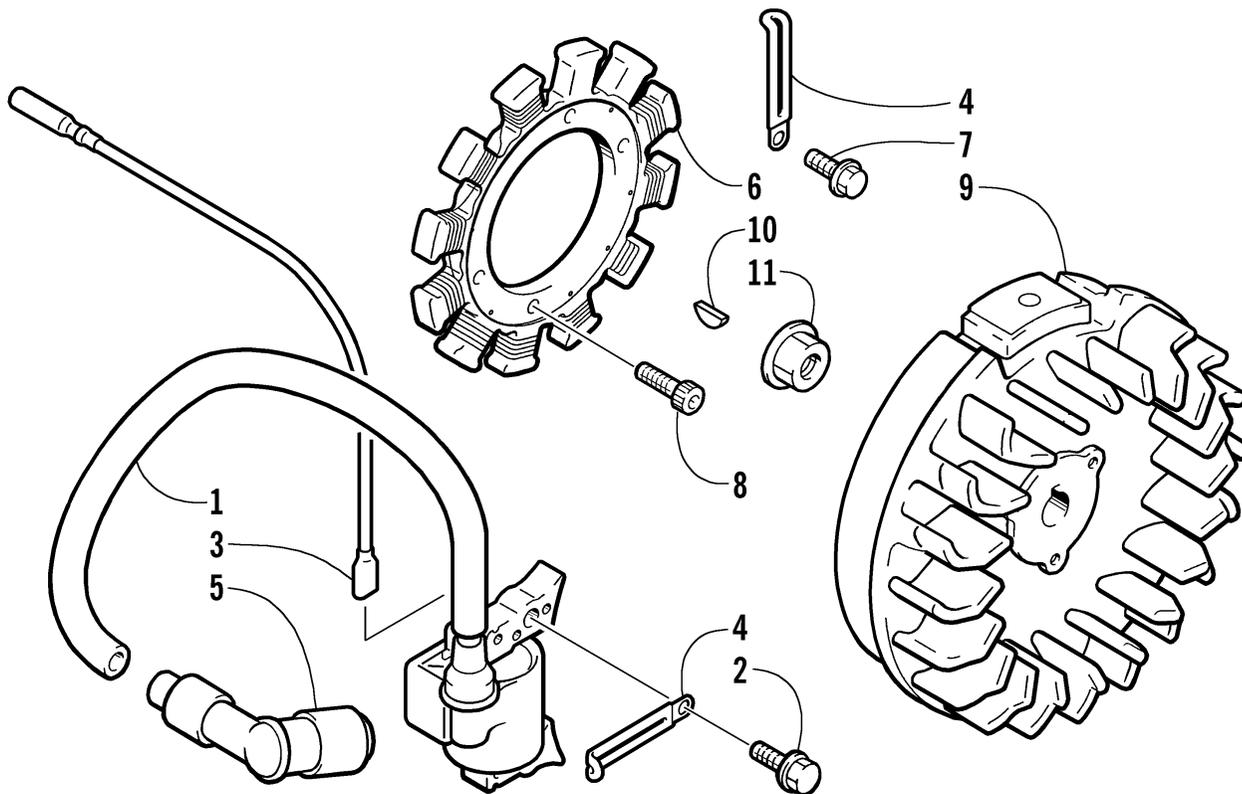

# MAGNETO

0735-431

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-326	1	Coil, Ignition - Assembly	7	0693-241	1	Bolt
2	0693-242	2	Bolt	8	0694-023	4	Bolt
3	0693-263	1	Wire, Magneto Lead	9	0694-030	1	Rotor/Flywheel
4	3002-964	2	Clamp, Wire	10	3004-540	1	Key
5	0691-322	1	Cap, Spark Plug	11	3004-380	1	Nut
6	0694-029	1	Stator				

# RELATED ITEMS

## 2002 ZR 120

(Model No. S2002ZRAAAUSG)

2639-399	Cover, Machine (Deluxe Coverall)	1639-766	Skid Plate - Green
1639-830	Wearbars, 4 in. Carbide (Pair)	2639-013	Wheel Kit - Rear Suspension
1639-831	Studs, Carbide Push-Through (24/pk)	1639-795	Wheel Kit - Ski
1639-762	Handlebar Grips - Green	1604-611	Wearstrips - Green
2639-019	Handwarmers	1639-526	Windscreen - Black
1639-763	Headlight Cover - Green	1639-768	Windshield - Tall
1639-764	Headlight Cover - Smoke	2256-468	Manual, Operator's
1639-761	Running Board Grip Plates - Green	2256-549	Manual, Illustrated Parts

■ **NOTE:** For a complete list of related items, refer to the current accessory catalog.

